WEATHERX

USER'S GUIDE
V:1624-0103-12

WR882R

Multi-Function Power Station

For the most up-to-date version of this User's Guide, go to **www.weather-x.net**

Warnings and Precautions

- **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
- **AVERTISSEMENT:** Pour réduire le risque d'incendie ou de choc électrique, ne pas exposer cet appareil sous la pluie et l'humidité.
- **WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- **WARNING:** Do not place the unit on top of any soft, porous, or sensitive surfaces to avoid damaging the surface. Use a protective barrier between the unit and surface to protect the surface.
- **WARNING:** The battery, batteries, and battery pack shall not be exposed to excessive heat such as sunshine, fire, or the like.
- **WARNING:** Lithium batteries, like all rechargeable batteries are recyclable and should be recycled or disposed of in normal household waste. Contact your local government for disposal or recycling practices in your area. They should never be incinerated since they might explode.
- **WARNING**: Shock hazard - Do Not Open.
- ***AVIS****: RISQUE DE CHOC ÉLECTRIQUE - NE PAS OUVRIR*
- When the the unit indicates low battery, it is important to charge the unit immediately or turn it off.
- Should the DC-AC boost converter not work properly, it is important to charge unit immediately.
- Unit must be charged for a minimum of 10 hours before initial use.
- **CAUTION:** Lead acid batteries must be charged at least every 3 months, especially in a warm environment. Leaving a battery in a discharged state, or not recharging every 3 months, may result in permanent battery damage. The Power switch should be in the OFF position to recharge the internal Lead acid battery.
- Because the internal battery contains lead, which can be hazardous if exposed to the environment, the old internal battery should be recycled or safely disposed of at your local recycling depot. Do not dispose of the old internal battery with common household waste. Please ask your local authorities about recycling services that are available in your area.
- It is important to know the continuous wattage of the device you plan to use with the inverter. It must be used with devices drawing 60 watts or less.
- **NOTE**: In the event of a power overload, the inverter is designed to automatically shut down. This safety feature prevents damaging the inverter while testing devices and equipment with the 60-watt limit.
- Mains Plug or Direct plug-in adapter is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the Mains Plug or Direct plug-in adapter should be disconnected from the mains socket outlet completely.

La fiche d'alimentation ou adaptateur de courant est utilisé comme dispositif de déconnexion et doit rester accessible pendant l'utilisation. Pour mettre l'appareil hors tension, la fiche ou adaptateur de courant doit être débranché de la prise de courant.

Do not mix old and new batteries.

Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc) batteries.

No mezcle baterías viejas y nuevas.

No mezcle baterías alcalinas, estándar (carbono-zinc) o recargables (ni-cad, ni-mh, etc.).

FCC Warnings

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING: This product contains a button-cell battery that could be accidentally ingested by children. Do not leave button-cell batteries accessible to children. If swallowed, promptly see doctor and call (202) 625-3333.

Introduction

Power
Adjust to power the unit on or off.

FM/WB/AM
Adjust to switch between FM, WB and AM radio modes.

Siren
Press to turn the siren on or off.

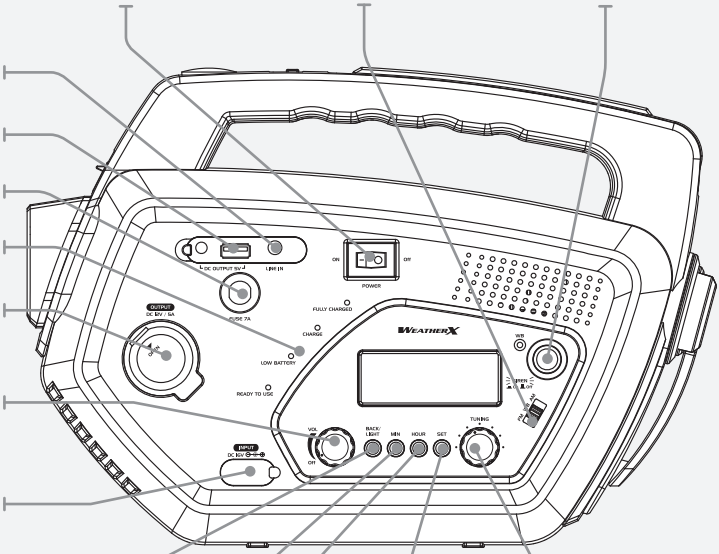

Line In

USB Output

Circuit Breaker

Charge Indicators

DC Output

Volume
Adjust the dial to turn the volume up or down.

DC Input

Backlight
Press to turn the backlight on.

Min
Press to adjust the min when setting the time.

Hour
Press to adjust the hour when setting the time.

Set
Press to begin setting the time.

Tuning
Adjust the dial to tune the radio.

Mosquito Repellent
Press to turn the mosquito repellent sound on or off.

Telescopic FM Antenna

Storage Compartment

AC Output
Adjust the switch to turn the AC power on or off.

Dynamo Hand Crank
Turn the crank to power the unit when there are no other power sources available, and to charge the internal battery.

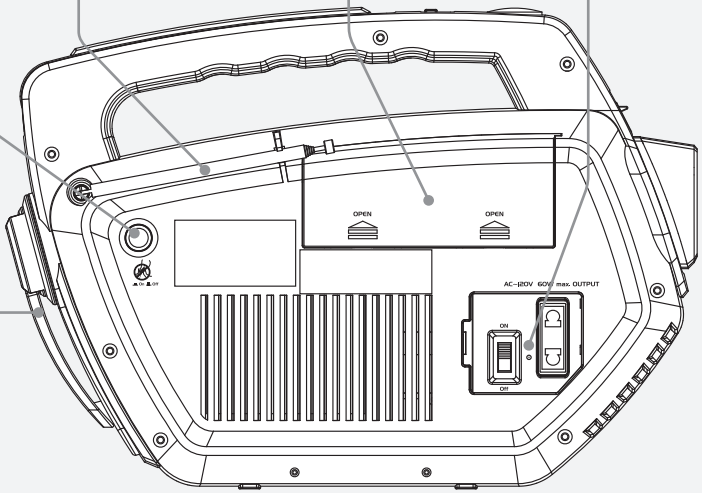

Flashlight Release Latch
Release latch to remove flashlight

Compass

Flashlight/Lantern
Adjust the switch to switch between flashlight, emergency, lantern, and off modes.

Lantern
Pull upwards gently to adjust the position of the lantern.

Flashlight

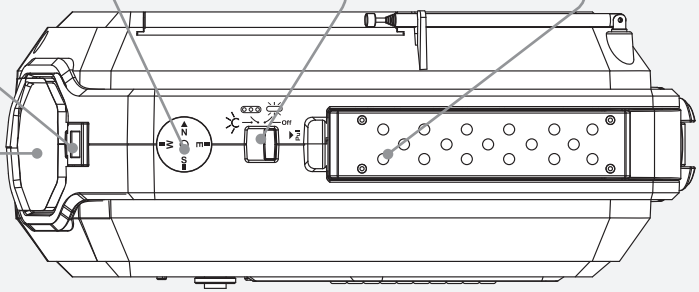

Power

AC Power

To power the unit, plug the included AC/DC adapter into a standard AC outlet.

Note: Unit must be charged for a minimum of 10 hours before initial use.

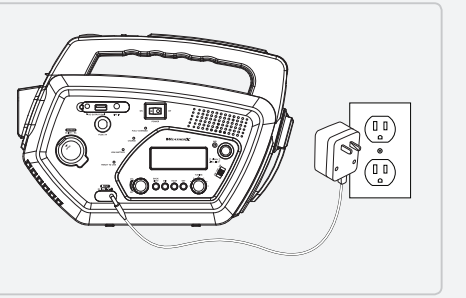

DC Power

To power the unit, plug the included DC adapter into the 12V/4A DC output (car cigarette lighter socket).

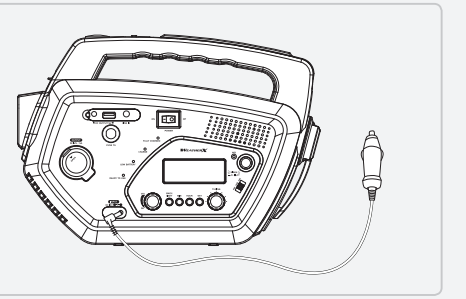

Flashlight

Requires 3 AA batteries (not included).

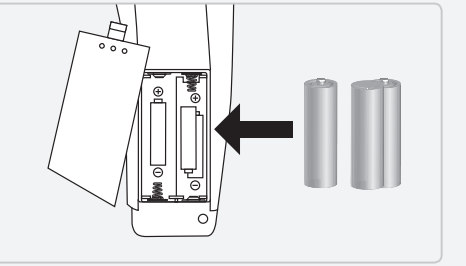

Power

Clock Battery Backup

Requires 2 AG-13 button cell batteries (included).

The clock battery backup is intended for powering the clock only. The unit's primary functions cannot run off of the battery backup alone.

Remove plastic strip before use.

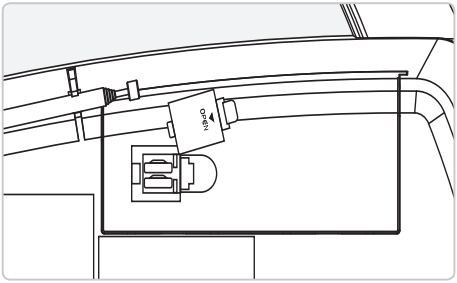

Dynamo Hand-Crank

The **Dynamo Hand-Crank** is for emergency situations only. It is recommended to use the **DC Output** to charge most devices.

In case of an emergency situation, crank the **Dynamo Hand-Crank** at 100-150 revolutions per minute to charge the internal battery.

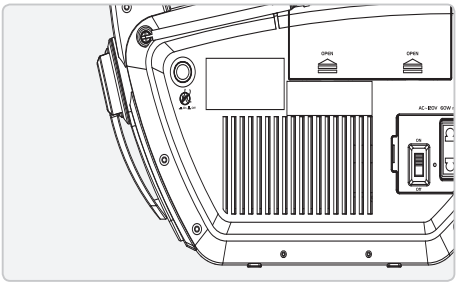

Charging Indicators

The indicators represent the level of charge held by the internal rechargeable battery, which can also be charged by the **Dynamo Hand-Crank.**

Status
Fully Charged
Charge
Need Recharge
Ready To Use

WARNING: The unit's button cell battery contains mercury. Do not put in the trash, instead recycle or dispose of as hazardous waste.

Clock, Radio and Weatherband

Setting the Clock

1. If the radio is on, turn the **Volume** dial to Off.
2. Press and hold the **Set** button.
3. While holding the **Set** button, press the **Min** button repeatedly to adjust the minutes.
4. While holding the **Set** button, press the **Hour** button repeatedly to adjust the hour.
5. Release the **Set** button to set the adjusted time.

Playing the AM/FM Radio

1. Adjust the **Power** switch to On.
2. Adjust **FM/WB/AM** switch to the AM or FM position.
3. Turn the **Volume** dial to turn on the radio and adjust to the desired volume.
4. Adjust the **Tuning** dial to tune the radio.

Radio Reception

Adjust the position of the **Telescopic FM Antenna** to improve FM radio reception.

An AM antenna is built into the clock radio. To improve AM radio reception, adjust the position of the unit.

Playing Weatherband

1. Adjust the **Power** switch to On.
2. Adjust **FM/WB/AM** switch to the WB position.
3. Turn the **Volume** dial to turn on the radio and adjust to the desired volume.
4. Adjust the **Tuning** dial to tune the radio.

   For a list of which areas receive which frequency, visit http://www.weather.gov/nwr/nwrbro.htm.

Charging, Circuit Breaker and 3.5mm Audio Input

Charging Devices

1. Using the appropriate charging cable (USB to mini-USB cable included), connect one end to the device and the other to the corresponding output on the unit.
2. The device will now charge.

Circuit Breaker

Should the unit short circuit or experience excess current, the circuit breaker will trip automatically to protect the circuit and the unit from damage.

After unplugging the cause of the faulty current, press the **Circuit Breaker** button to restore normal operation.

Using the Audio Input

Requires a 3.5mm audio cable (included)

1. Connect a 3.5mm audio cable to the **3.5mm Audio Input** and the audio output on an MP3 player or other audio device.
2. Adjust the **Power** switch to On.
3. Turn the **Volume** dial to turn on the audio and adjust to the desired volume.
4. Use the native controls on the connected MP3 player or other audio source to play your audio through the power station.

Company Information

International Support

To download this User's Guide in English, Spanish, or French, or to get answers to frequently asked questions, visit the support section at www.weather-x.net.

Para descargar este Manual del Usuario en inglés, español y francés, o para obtener respuestas a preguntas frecuentes, visite la sección de apoyo en www.weather-x.net.

Pour télécharger ce guide de l'utilisateur en anglais, espagnol ou français, ou pour obtenir des réponses à des questions fréquemment posées, consultez la rubrique d'assistance sur www.weather-x.net.

Contact Information

Phone: 1-888-999-4215
Email: weatherxcustserv@weather-x.net
Parts Email: partsinfo@dpi-global.com
Website: www.weather-x.net

Warranty

For Warranty Information and the most up-to-date version of this User's Guide, go to www.weather-x.net

Green Initiative

MADE GREEN
protect for today • sustain for tomorrow